Phase Plug Support

INTRODUCTION
LICENSE AGREEMENT AND WARRANTY
CUSTOMER SUPPORT
INSTALLATION
INTERFACE OVERVIEW
MENU BAR
TAB CONTROL
UNITS AND PREFIXES
SAVED DATA FORMAT
REFERENCES

© Copyright 2004-2015 by SpeakerLAB Srl
All Rights Reserved

Printed in Italy, May 2015

IBM is a registered trademark of International Business Machines Corporation.
Windows is a registered trademark of Microsoft Corporation.

INTRODUCTION

ABOUT THIS MANUAL

This User's Manual explains the **PPS** software version 1.0.0.

WHAT THIS USER MANUAL DOES COVER

The PPS software is a tool to fast design 2D Phase Plug. There are several documents on many of the topics that PPS handles. This User Manual is intended not to explain Phase Plug theory, this issue is left to the reader to explore through the available literature, but only as a guide to allow the user to quickly become efficient with the user interface PPS software.

LICENSE AGREEMENT AND WARRANTY

THANKS

Thank you for purchasing your PPS software. We hope that your experiences using PPS will be both productive and satisfying.

SpeakerLAB's WARRANTY

SpeakerLAB warrants to the original licensee that the disk(s) and or electronic key(s) on which the program is recorded will be free from defects in materials and workmanship under normal use for a period of ninety (90) days from the date of purchase. If failure of the product components has resulted from accident, abuse, or misapplication of the product, then SpeakerLAB or third party licensors shall have no responsibility to replace the disk(s) or key(s) under this limited warranty.

WARNINGS AND LIMITATIONS OF LIABILITY

SpeakerLAB will not assume liability for damage or injury due to user servicing or misuse of our product. SpeakerLAB will not assume liability for the recovery of lost programs or data. The user must assume responsibility for the quality, performance and the fitness of SpeakerLAB software and hardware for use in professional production activities. In addition to the foregoing, you should recognize that all complex software systems and their documentation contain errors and omissions. SpeakerLAB, its distributors, and dealers shall not be responsible under any circumstances for providing information on or corrections to errors and omissions discovered at any time in the product, whether or not they are aware of the errors or omissions. SpeakerLAB does not recommend the use of this product in applications in which errors or omissions could result in loss of life, injury, or other significant loss. You may not: (a) distribute copies of the program or the documentation to others, (b) lease, rent, grant sublicenses, or other rights to the program, (c) provide use of the program in a computer service business, network, time-sharing multiple CPU, virtual machine or multiple users arrangement without the prior written consent of SpeakerLAB, (d) translate or otherwise alter the program or related documentation without the prior written consent of SpeakerLAB.

This license agreement shall be governed by the laws of the state of Italy and shall inure to the benefit of SpeakerLAB, its successors, administrators, heirs and assigns or third party licensors. For further detail of software license agreement read License.pdf file.

CUSTOMER SUPPORT

SpeakerLAB provides detailed electronic manuals and on-line help within the program as the primary source for user information and assistance regarding the use of this product. If these sources do not contain the answers to your questions, for technical problems, bug reports, or suggestions for future software enhancements contact SpeakerLAB via any of the following methods:

website: www.speakerlab.it
e-mail: info@speakerlab.it

Technical support is free and unlimited at this time; however we reserve the right to charge for this service in the future as conditions, overhead, and support personnel requirements dictate.

INSTALLATION

SYSTEM REQUIREMENTS

PPS software is an extremely intensive numerical application. The program contains hundreds of numerical mathematics algorithms, some of which are extremely large and place very high demands on the CPU's floating point performance. PPS software requires a full 32 bit operating system and can be installed in any personal computer with the following minimum system requirements:

- Pentium IV processor (suggested 1GHz)
- 500 MB RAM (suggested 1GHz)
- Mouse and Keyboard
- 300 MB free HDD space
- 800 x 600 resolution video adapters (suggested 1280 x 720)
- Microsoft Windows XP or 7
- Adobe Acrobat Reader

SOFTWARE INSTALLATION

- Delete all previous installations, included Demo Version
- Place the distribution CD into your CD-ROM drive
- If the CD does not AutoRun, locate and run the Phase Plug Support.exe file
- Follow the instructions on the screen
- After installation Shutdown and Restart OS
- Run PPS from relative link on desktop or from SpeakerLAB folder on Start Menu
- At first launch PPS create a code on desktop
- Send this code to the factory: copy or attach it in the e-mail info@speakerlab.it

INTERFACE OVERVIEW

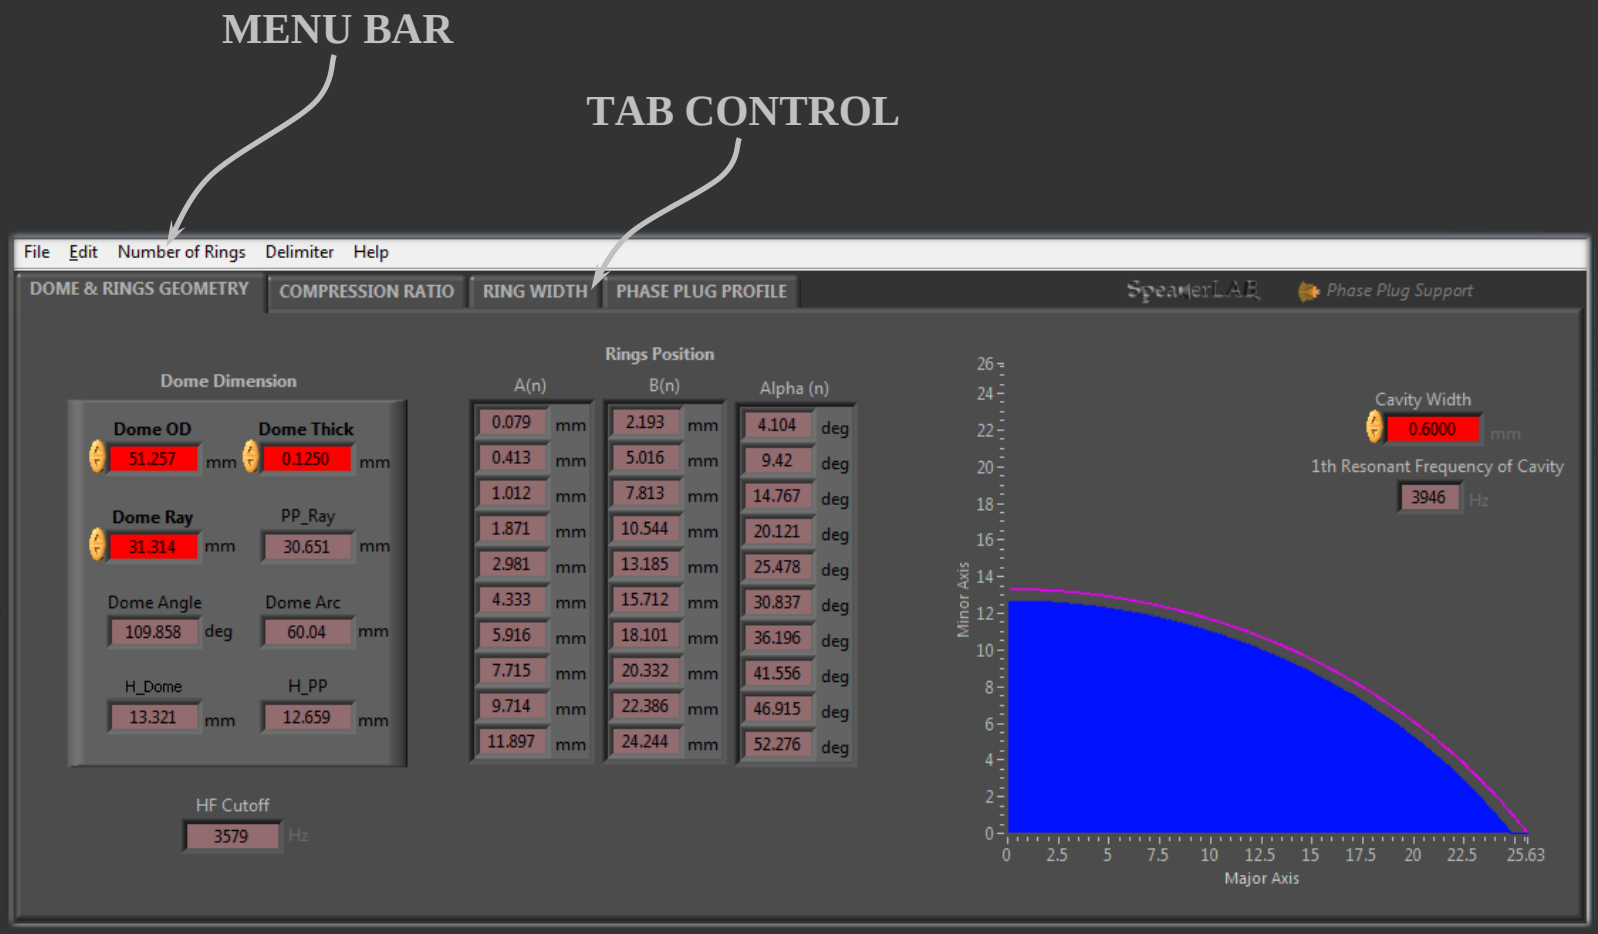

MENU BAR

File

Open **Ctrl+O**
Select a *.DAT file to read and open a saved project from “Horn db” database

Exit **Ctrl+Q**
Quit and exit from Horn.ell.a. After you select Exit the software ask you a confirmation of this action

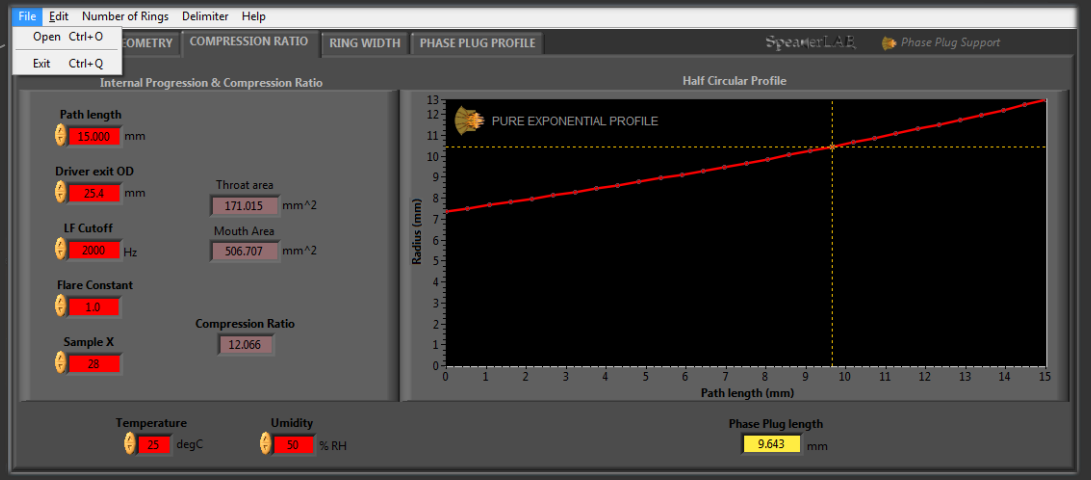

Edit

Cut **Ctrl+X**
Cut data from clipboard

Copy **Ctrl+C**
Copy data from clipboard

Paste **Ctrl+V**
Paste data into clipboard

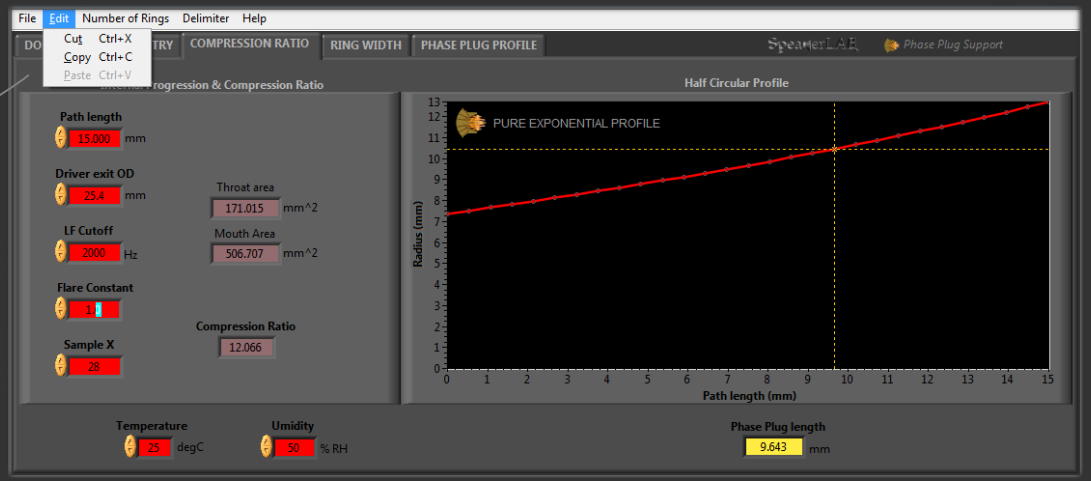

Number of Rings

Number of phase plug rings. If NR= 1 there is a single channel. Max NR= 10.

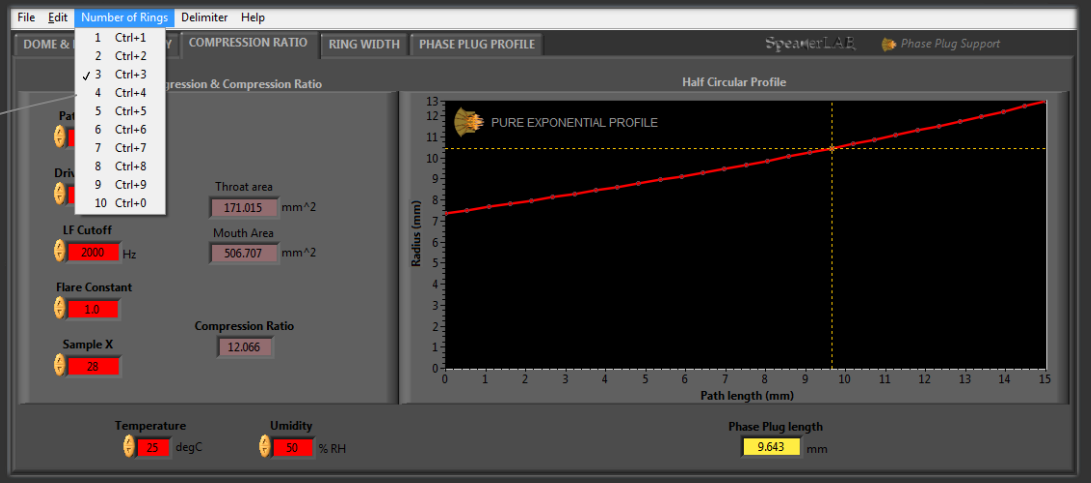

Delimiter

TAB
Saved data separated by TAB

Comma
Saved data separated by comma

Dot
Saved data separated by dot

Space
Saved data separated by space

Custom
Saved data separated by a free custom delimiter

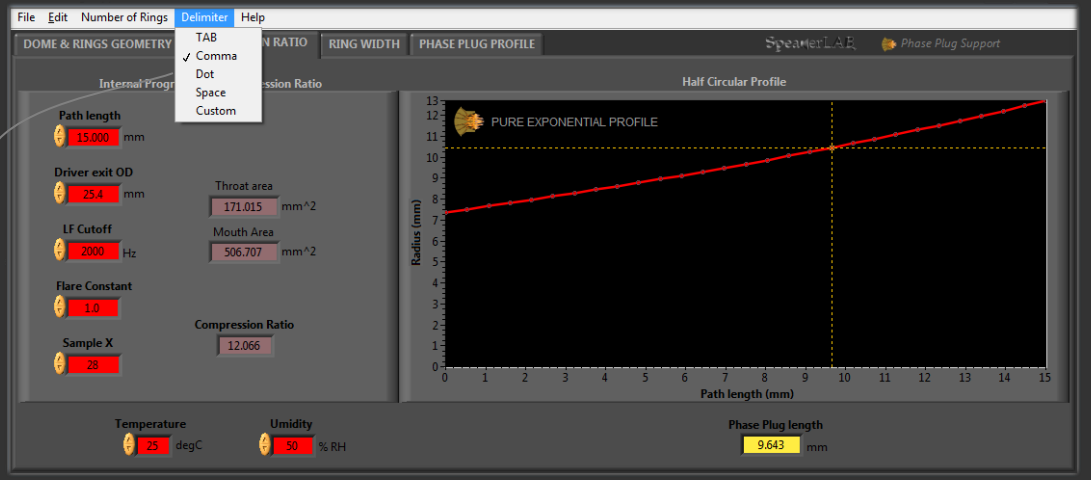

Help

Contest Help
Instantaneous on line information on mouse passage

Phase Plug Support Help
Open this pdf manual

Web Resources
Open factory web site on a default internet browser

About
Open product information

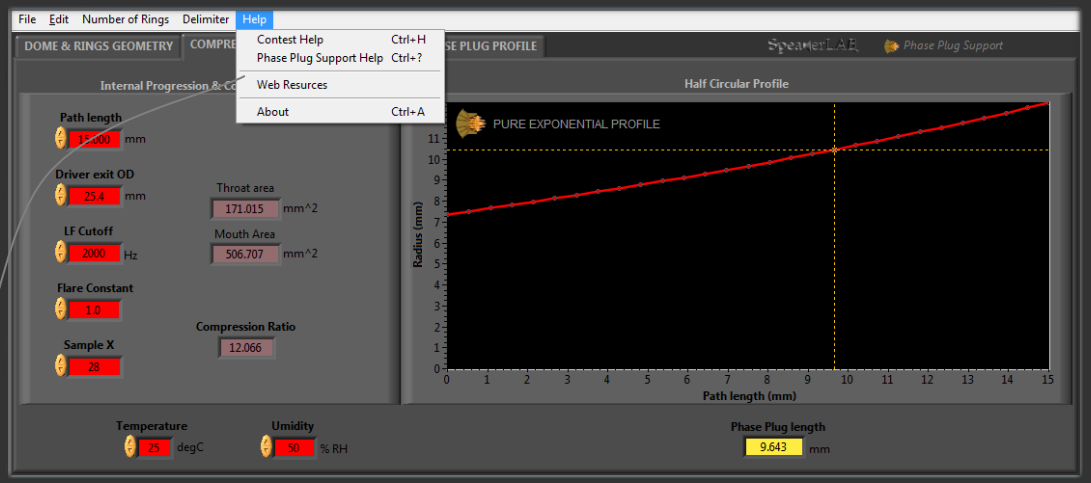

TAB CONTROL

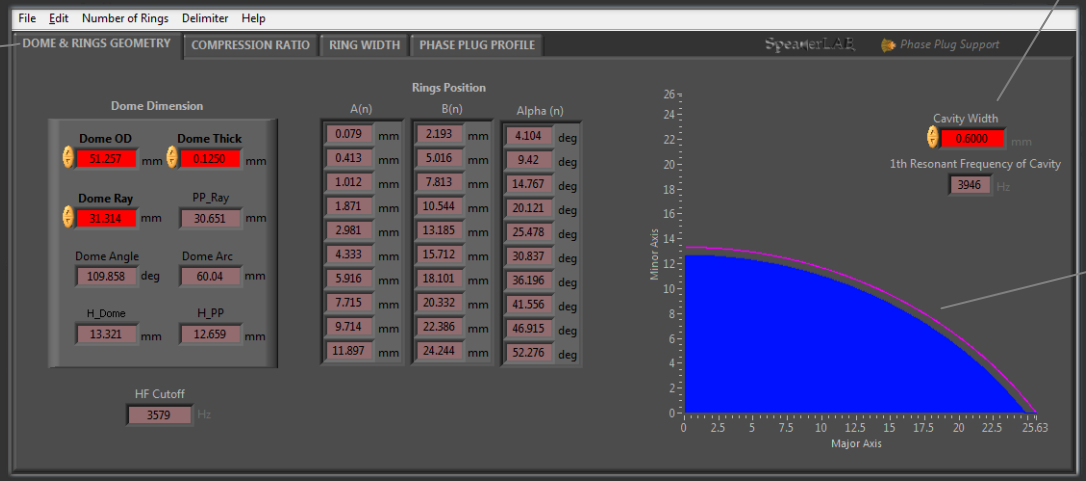
File Edit Number of Rings Delimiter Help
DOME & RINGS GEOMETRY
COMPRESSION RATIO
RING WIDTH
PHASE PLUG PROFILE
SpeakerLAB
Phase Plug Support
Dome Dimension
Dome OD 51.257 mm
Dome Thick 0.1250 mm
Dome Ray 31.314 mm
PP_Ray 30.651 mm
Dome Angle 109.858 deg
Dome Arc 60.04 mm
H_Dome 13.321 mm
H_PP 12.659 mm
HF Cutoff 3579 Hz
Rings Position
A(n)
B(n)
Alpha (n)
0.079 mm 2.193 mm 4.104 deg
0.413 mm 5.016 mm 9.42 deg
1.012 mm 7.813 mm 14.767 deg
1.871 mm 10.544 mm 20.121 deg
2.981 mm 13.185 mm 25.478 deg
4.333 mm 15.712 mm 30.837 deg
5.916 mm 18.101 mm 36.196 deg
7.715 mm 20.332 mm 41.556 deg
9.714 mm 22.386 mm 46.915 deg
11.897 mm 24.244 mm 52.276 deg
Cavity Width 0.6000 mm
1th Resonant Frequency of Cavity 3946 Hz
Minor Axis
Major Axis
0 2.5 5 7.5 10 12.5 15 17.5 20 22.5 25.63

Cavity width
is the volume area between Dome and Phase Plug.
In other words this gap is the distance between the inner diameter of the dome and the outer diameter of phase plug.

In this graph is visible the axis symmetric half section profile of **Dome** (pink line) and filled **Phase Plug** (blue area).

DOME & RINGS GEOMETRY

In the first TAB you can edit the dome variables (red displays). In the central table Phase Plug Support resolve the axis position and Alpha angle of each selected rings.

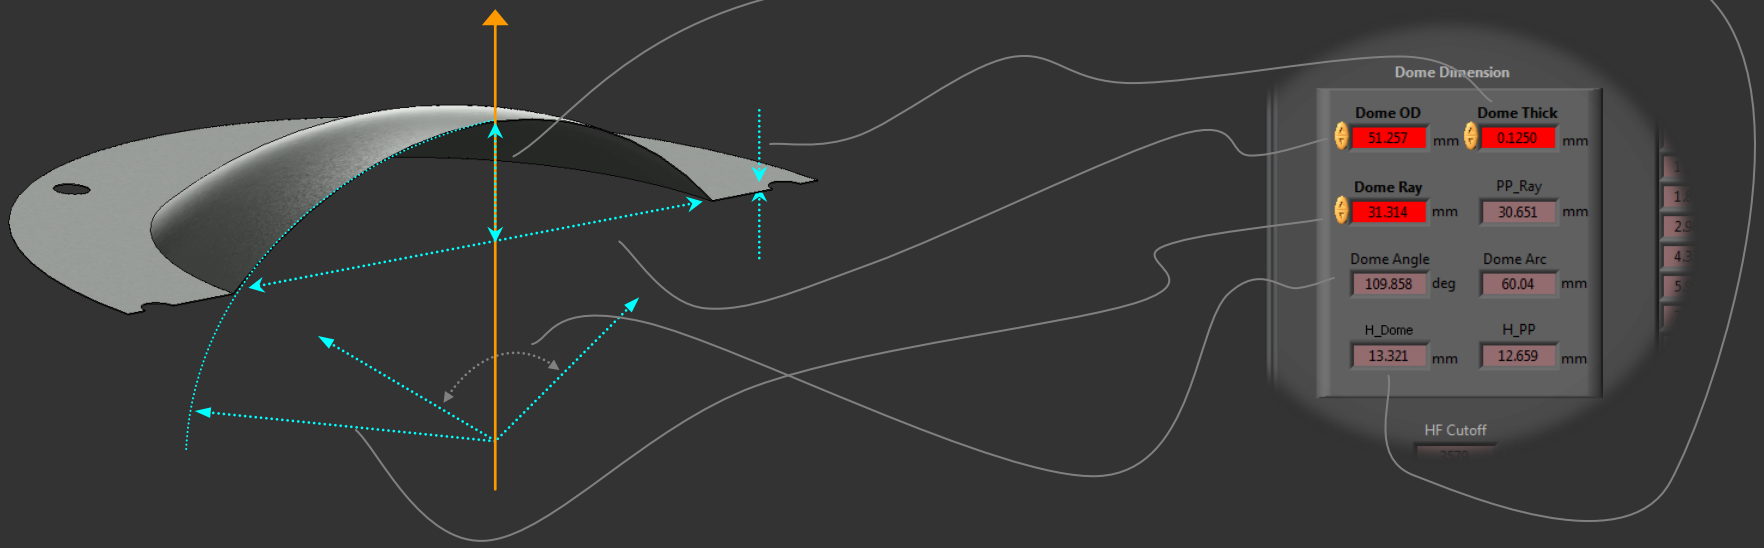
Dome Dimension
Dome OD
51.257
mm
Dome Thick
0.1250
mm
Dome Ray
31.314
mm
PP_Ray
30.651
mm
Dome Angle
109.858
deg
Dome Arc
60.04
mm
H_Dome
13.321
mm
H_PP
12.659
mm
HF Cutoff

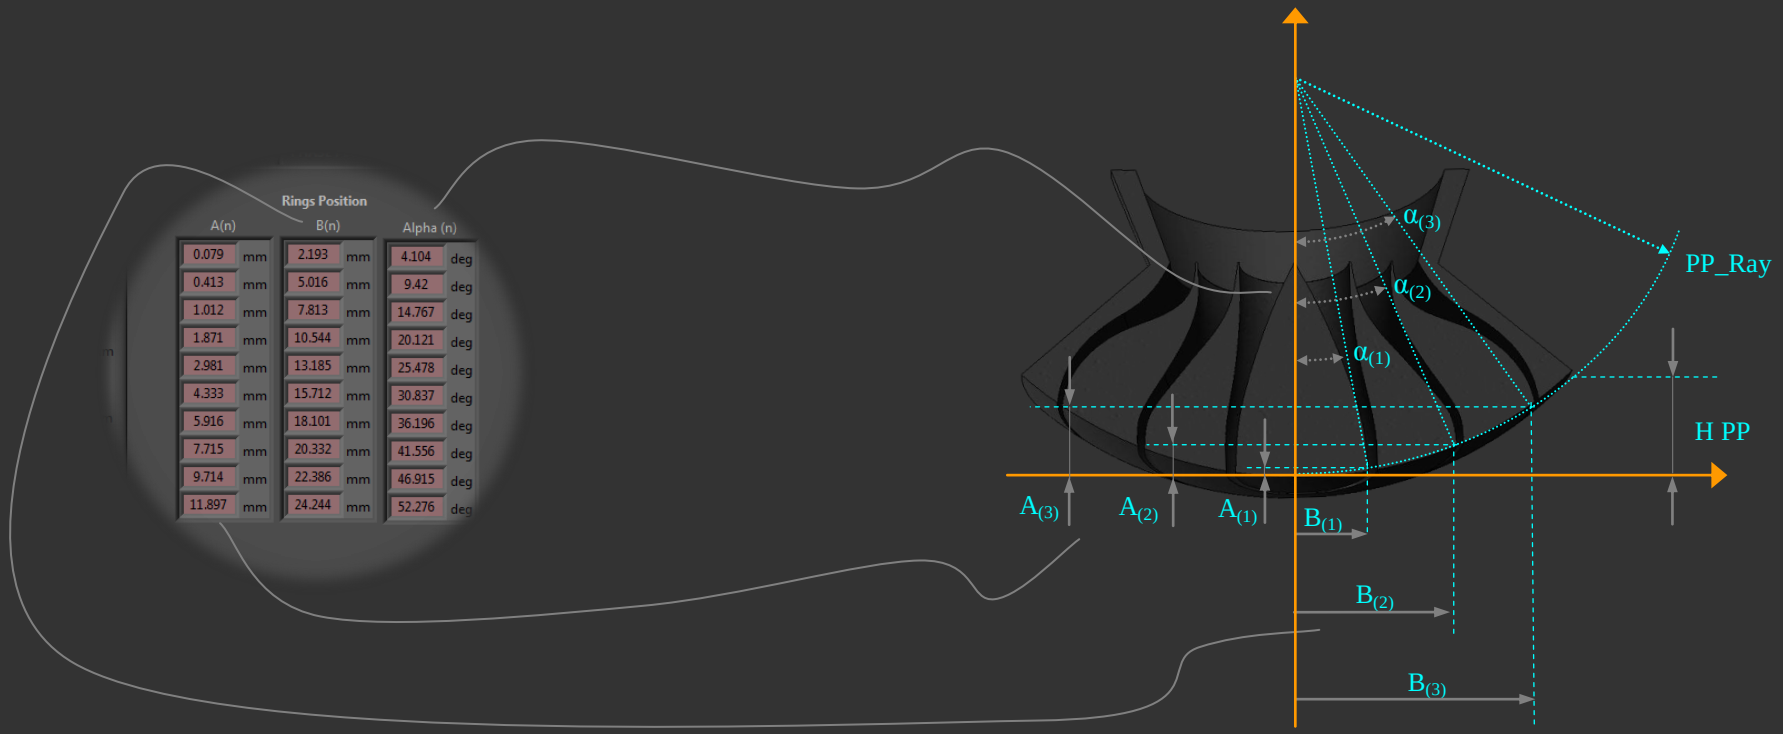
Rings Position
A(n)
B(n)
Alpha (n)
0.079 mm 2.193 mm 4.104 deg
0.413 mm 5.016 mm 9.42 deg
1.012 mm 7.813 mm 14.767 deg
1.871 mm 10.544 mm 20.121 deg
2.981 mm 13.185 mm 25.478 deg
4.333 mm 15.712 mm 30.837 deg
5.916 mm 18.101 mm 36.196 deg
7.715 mm 20.332 mm 41.556 deg
9.714 mm 22.386 mm 46.915 deg
11.897 mm 24.244 mm 52.276 deg
α(3)
α(2)
α(1)
PP_Ray
H PP
A(3)
A(2)
A(1)
B(1)
B(2)
B(3)

Moving yellow point **cursor** is possible to set the required **Phase Plug Length**. By this way the designer have the channels path on left side and the compression driver exit on right side (usually integrated in the pole plate). Positioning the cursor on maximum path length it's possible to design a full path phase plug.

In the **Half Circular Profile** graph there is the half section profile of the total volume area of phase plug.

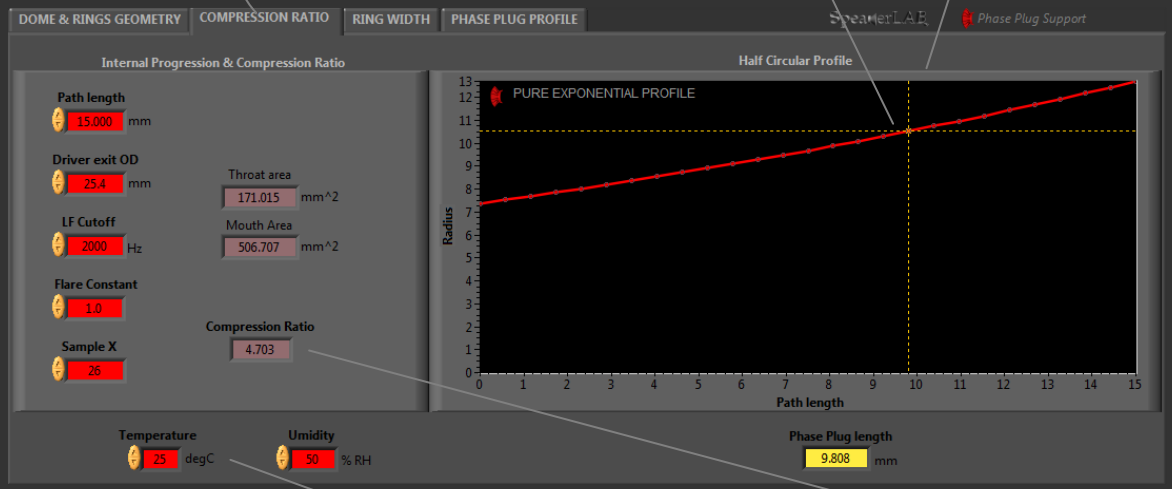

Compression Ratio
is the ratio of the projection of radiating membrane area in the direction of vibration to the area of the surface of compression cavity.

Environment information
are the environment average working temperature and humidity of the internal path of compression driver. This information is very important to obtain a high-quality final result of expected low frequency response.
In ex. for **High Fidelity** applications an indicative temperature values range could be about 310÷330 K, for **Professional** applications a range about 330÷360 K.

COMPRESSION RATIO

In the second TAB you can edit channels opening and path profile to adjust the required Compression Ratio.

Flare Constant
is the degree of hyperbolic expansion.

If Flare Constant= 0 the expansion is Catenoid.
If Flare Constant= 1 the expansion is purely Exponential.
If Flare Constant< 1 the expansion is Hyperbolic Cosine.
If Flare Constant> 1 the expansion is Hyperbolic Sine.
If Flare Constant tends to +∞ the expansion is Conic.

LF Cut-Off
is the lower crossover frequency

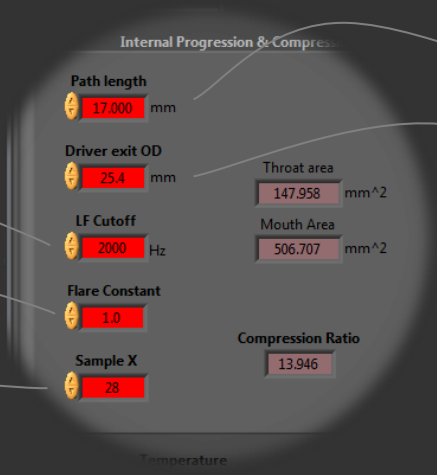

Sample X
Samples X is the quantity of segments to split the total phase plug length.

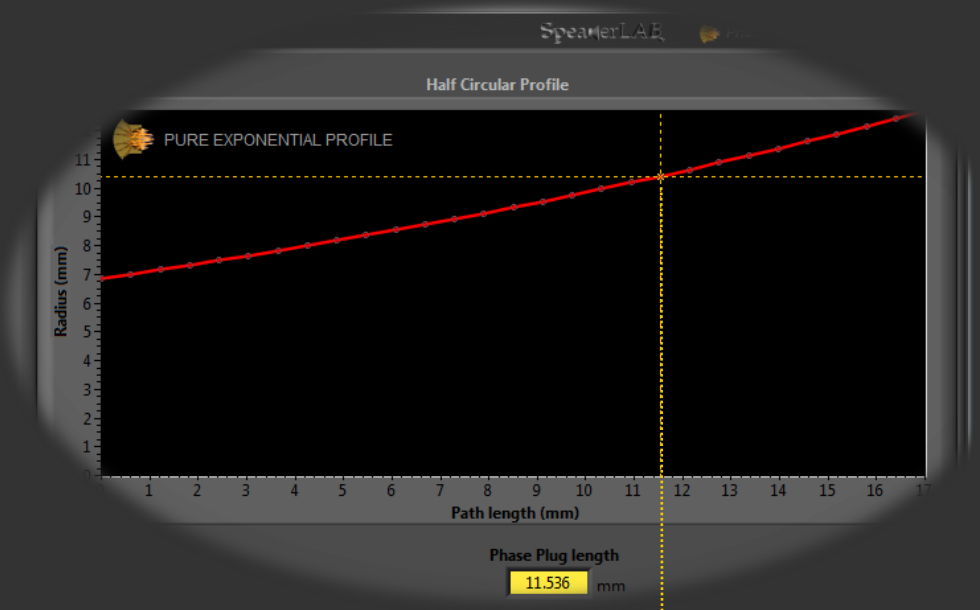

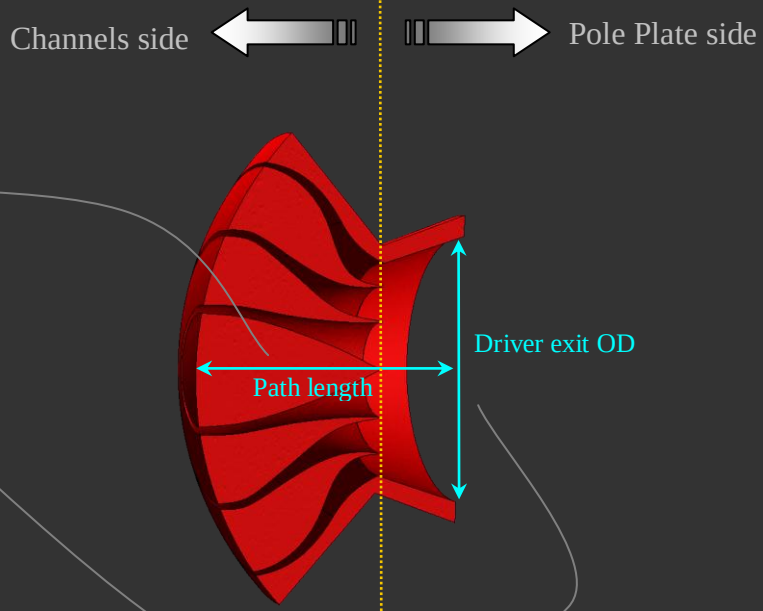

Target throat area is obtained in COMPRESSION RATIO TAB.
To achieve target Compression Ratio value setting **Width of Ring (n)** array, to obtain a value of **Rings throat area** next to **Target throat area**.

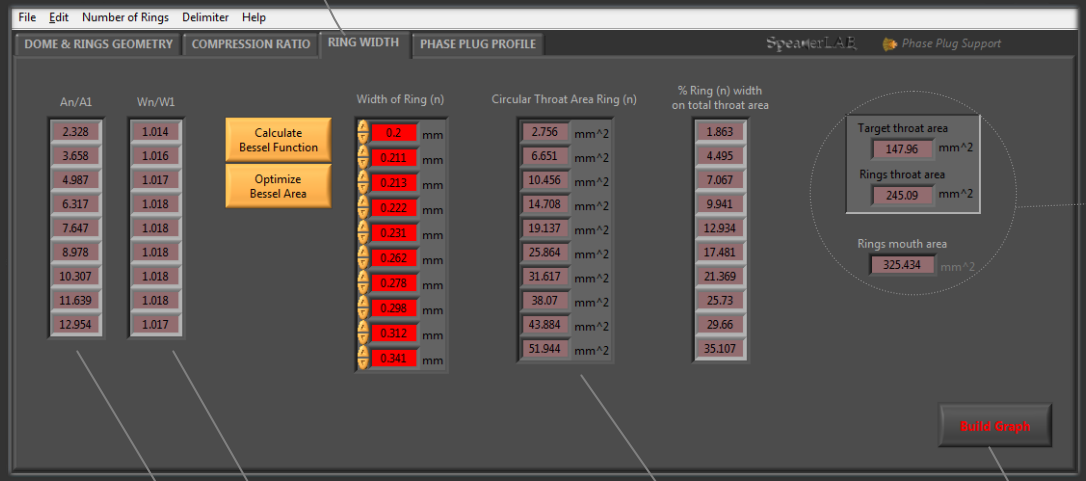

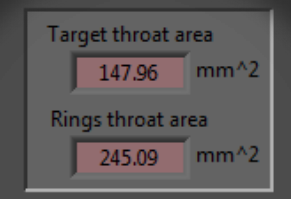



Ring Width ratio

Ring Area ratio

If you need to build a phase plug with **Radial** slots, consider this data and convert it into radial throats.

Sum of rings exit area

When you terminate the project and set all parameters, you can build 2D Graph.

RING WIDTH

In the third TAB the goal is to set the required rings width to achieve target Compression Ratio.

Width of Ring (n)
Setting different **Width of Ring (n)** values you can modify the **Rings throat area**. There are 3 techniques to set the rings width array:

- **Manual Setting**
- **Calculate Bessel Function**
- **Optimize Bessel Area**

Calculate Bessel Function
Set only the first value of ring width and push **Calculate Bessel Function** button to obtain the other values with Bessel Function. The default first value is 1 mm.

Optimize Bessel Area
Push **Optimize Bessel Area** button to start the automatic fitting process to set all ring width values. This process finish when the value of **Rings throat area** reaches the value of **Target throat area.**

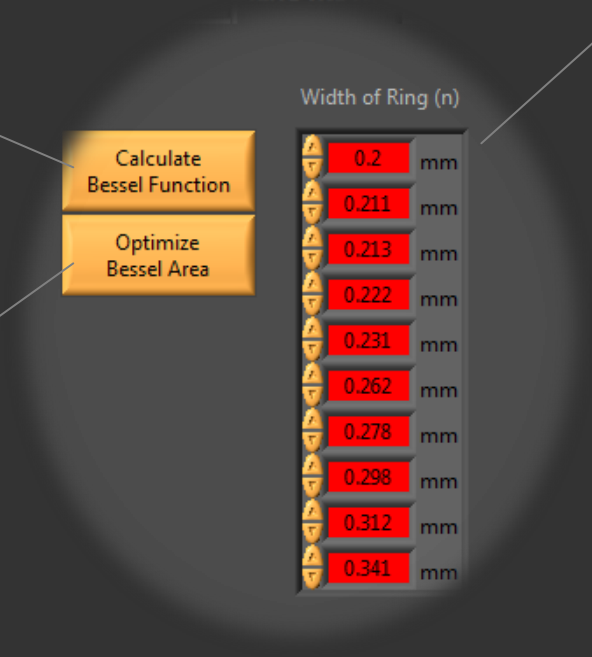

Manual Setting
Possibility to free edit all single display value.
This technique is useful in case of external calculation of rings width, in ex. with Legendre Functions; or in case of experimentation with FEM/BEM simulation.

To modify phase plug path:

1) Select channel with **Cursor Control**
2) Move cursor with mouse along the channel profile and positioning cursor on the requested point
3) Press space bar to edit the point
4) Drag the selecting point on new position on the space
5) Press space bar to drop the point

PP Side
select the membrane side for the phase plug position (convex or concave side)

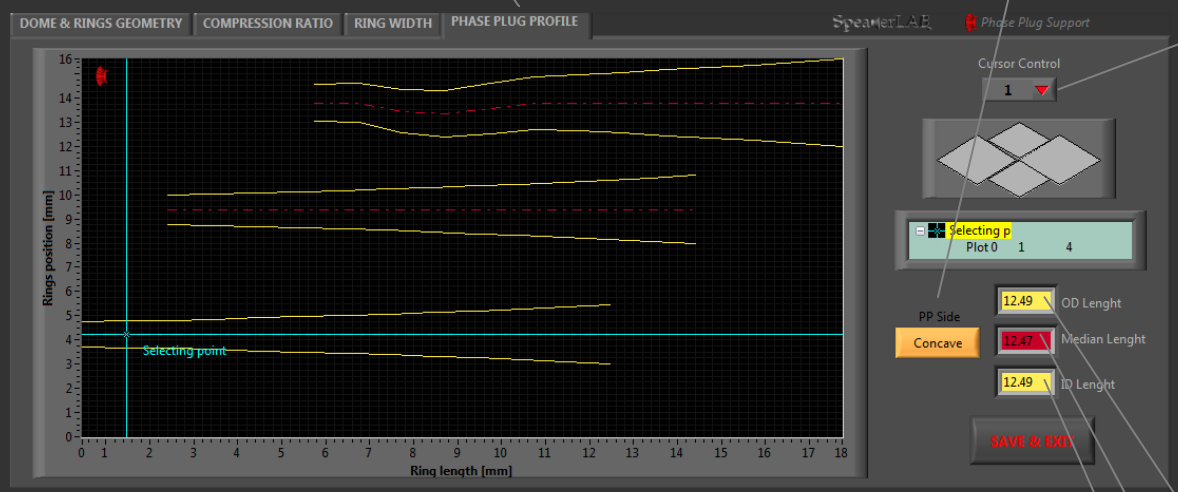

Select channel to measure & edit

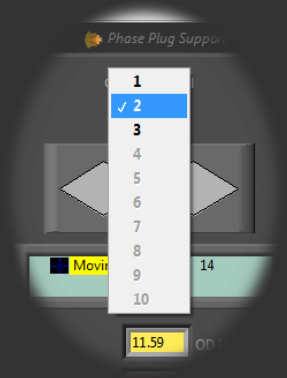

PHASE PLUG PROFILE

In the forth TAB you can visualize the half section of phase plug progression. It's possible to edit every point positions to create any required phase plug shape.

Outer length of channel (upper yellow line) where is the active cursor.

Median length of channel (red line) where is the active cursor.

Inner length of channel (lower yellow line) where is the active cursor.

UNITS AND PREFIXES

PPS recognizes both **SI units** and units from other systems of measurement. It's possible to directly convert unit string writing on the unit box your preferred unit.

Some length unit examples are **m**, **cm**, **mm**, **in**, **ft**, etc.
Some temperature unit examples are **K**, **degC**, **degF**, etc

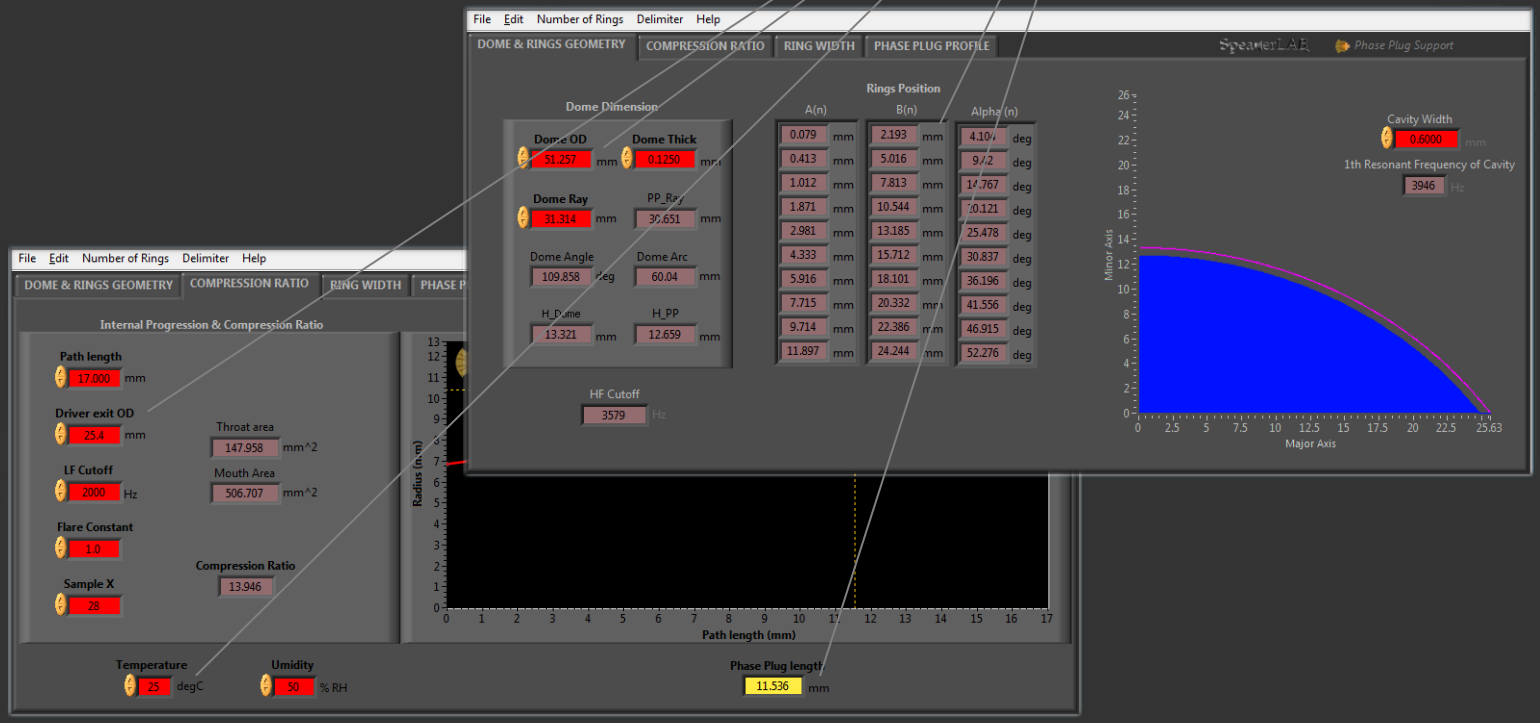

PPS recognizes also a prefix to a unit. To apply a preferred prefix selects the prefix in this listbox.

SI prefixes

y	yocto	10^{-24}
z	zepto	10^{-21}
a	atto	10^{-18}
f	femto	10^{-15}
p	pico	10^{-12}
n	nano	10^{-9}
u	micro	10^{-6}
m	milli	10^{-3}
c	centi	10^{-2}
d	deci	10^{-1}
da	deka	10^{1}
h	hecto	10^{2}
k	kilo	10^{3}
M	mega	10^{6}
G	giga	10^{9}
T	tera	10^{12}
P	peta	10^{15}
E	exa	10^{18}
Z	zetta	10^{21}
Y	yotta	10^{24}

SAVED DATA FORMAT

Saved Data
Inside Phase Plug Support.exe directory path, the software automatically creates the database **Phase Plug db and** putting inside all saved designs.

When saving the design PPS generates a directory with the name you selected.

If you don't type any name for a design, PPS save the files in the **Last Routed** directory. This operation is useful in case of forget to type a name, or due to fortuity button pressing.

Each directory inside **Phase Plug db** appears with this style

0 ÷ N are 2D design text files, with this format:
X,Y,Z

N= (Number of phase plug rings x 2) − 1
N= odd numbers → inner channels profile
N= even numbers → outer channels profile

(X,Y,Z are floating-point numbers by 6 fractional format digits. In all cases Z=0)

Data is a .DAT file, it's required to reopen the project with all saved configuration.

Exit (if ≠ 0) is a 2D text files of the compression driver exit profile (usually integrated in the pole plate).

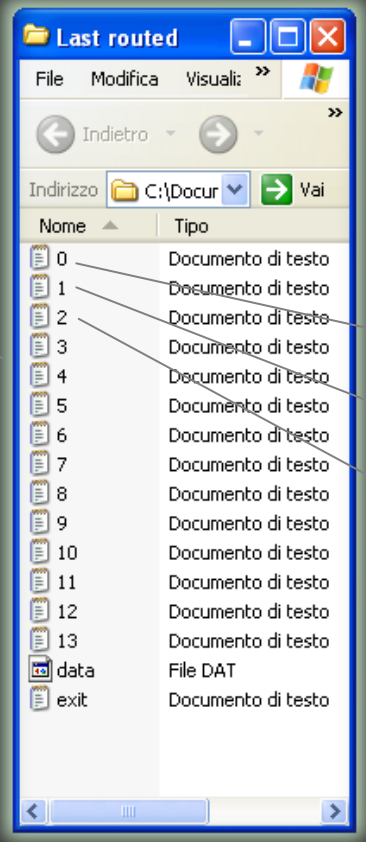

In this example:
a phase plug with 7 rings

inner first channels profile

outer first channels profile

inner second channels profile

.
.
.
.
.

REFERENCES

L. L. Beranek
ACOUSTIC

D. Bie
DESIGN AND THEORY OF A NEW MIDRANGE HORN DRIVER
Presented at the 93rd AES Convention 1992 October 1-4 San Francisco

D. Bie
NORMAL MODES OF SOME COMMON THIN METAL DIAPHRAGMS
Preprint 2982, Presented at the 89th AES Convention 1990 September 21-25 Los Angeles

D. Bie
VIBRATION RESONANCES OF A TITANIUM LOUDSPEAKER DIAPHRAGM
Presented at the 104th AES Convention 1998 May 16-19 Amsterdam

F. Bolaños
STRESS ANALYSIS ON MOVING ASSEMBLIES AND
SUSPENSIONS OF LOUDSPEAKERS
Presented at the 121st AES Convention, San Francisco, 2006 October 3-5

F. Bolaños
TARGET MODES IN MOVING ASSEMBLIES OF COMPRESSION DRIVERS AND OTHER SPEAKERS
Presented at the 125th AES Convention, San Francisco, 2008 October 2-5

A. Bright
VIBRATION BEHAVIOUR OF SINGLE-SUSPENSION ELECTRODYNAMIC LOUDSPEAKERS
Presented at the 109th AES Convention, Los Angeles, 2000 Sptember 22-25

G. Diana, F. Cheli
DINAMICA E VIBRAZIONE DEI SISTEMI

M. Dodd, J. Oclee-Brown
NEW METHODOLOGY FOR THE ACOUSTIC DESIGN OF COMPRESSION DRIVER PHASE PLUGS WITH CONCENTRIC ANNULAR CHANNELS
J. Audio Eng. Soc., Vol. 57, No. 10, 2009 October

M. Dodd
THE DEVELOPMENT OF A FORWARD RADIATING COMPRESSION DRIVER BY THE APPLICATION OF ACOUSTIC, MAGNETIC, AND THERMAL FINITE ELEMENT METHODS
J. Audio Eng. Soc. (Abstracts), vol. 51, p. 1224 (2003 Dec.), convention paper 5886

M. Dodd
WIDE DISPERSION CONSTANT DIRECTIVITY DUAL CONCENTRIC DRIVER
Presented at the 92nd AES Convention 1992 March 24-27 Vienna

F. Fahy
SOUND AND STRUCTURAL VIBRATION

E. R. Geddes, L. W. Lee
AUDIO TRANSDUCERS

C. A. Henricksen
PHASE PLUG MODELLING AND ANALYSIS: RADIAL VERSUS CIRCUMFERENTIAL TYPES
presented at the 59th AES Convention, J. Audio Eng. Soc. (Abstracts), vol. 26, p. 386 (1978 May), preprint 1328

J. K. Hilliard, J. A. Renkus
DEVELOPMENT OF HORN-TYPE MOVING COIL DRIVER UNIT
J. Audio Eng. Soc., October 1966, vol. 14, N. 4

B. Howze, C. Henricksen
A HIGH-EFFICIENCY, ONE-DECADE MIDRANGE LOUDSPEAKER
Presented at the 70th AES Convention 1981 October 30- November 2 New York

N. W. McLachlan
LOUD SPEAKERS

N. Sakamoto, K. Satoh, K. Satoh, N. Atoji
LOUDSPEAKER WITH HONEYCOMB DISK DIAPHRAGM
J. Audio Eng. Soc., Vol. 29, No. 10, 1981 October

B. H. Smith
AN INVESTIGATION OF THE AIR CHAMBER OF HORN TYPE LOUDSPEAKERS
J. Acoustic Soc. Am., vol. 25, pp. 305–312 (1953 Mar.)

G. W. Sioles
TWEETER DESIGN CONSIDERATIONS
J. Audio Eng. Soc., July 1956, vol. 4, N. 3

A. Voishvillo
NONLINEARITY IN HORN DRIVERS WHERE THE DISTORTION COMES FROM?
Presented at the 113th AES Convention, Los Angeles, 2002 October 5-8

S. Xiaoxiang, S. Yong , D. Yongzheng
MODAL OPTIMIZATION OF DISTRIBUTED MODE LOUDSPEAKER
Presented at the 118th AES Convention, Barcelona, Spain, 2005 May 28–31

E. C. Wente, A. L. Thuras
MOVING COIL TELEPHONE RECEIVERS AND MICROPHONES
J. Acoustic Soc. Am., vol. 3, pp. 44–55 (1931 July)

www.speakerlab.it

This document is written only for electronic use. Please consider the environment before printing!